



# USER GUIDE

LiFePO4 Battery System for Households



LiFePO4 Battery System for Households

# Contents

|                                                                   |    |
|-------------------------------------------------------------------|----|
| <b>1.ABOUT THIS MANUAL</b>                                        | 1  |
| 1.1 Purpose                                                       | 1  |
| 1.2 Scope                                                         | 1  |
| 1.3 Safety Instructions                                           | 1  |
| 1.4 Can be Connected in Parallel                                  | 1  |
| 1.5 Safety Rules                                                  | 2  |
| 1.6 Safety information                                            | 2  |
| <b>2.TRANSPORTATION</b>                                           | 2  |
| 2.1 Regulations for the transport of battery modules              | 2  |
| 2.2 Permissible and Impermissible Storage Positions of a Packaged | 3  |
| <b>3.STORAGE</b>                                                  | 3  |
| <b>4.INTRODUCTION</b>                                             | 4  |
| 4.1 Features                                                      | 4  |
| 4.2 Product Overview                                              | 4  |
| 4.3 Specifications                                                | 6  |
| 4.4 Recommended Settings                                          | 7  |
| 4.5 Labels                                                        | 7  |
| <b>5. INSTALLATION PROCEDURE</b>                                  | 8  |
| 5.1 Setup Script                                                  | 8  |
| 5.2 Tools                                                         | 10 |
| 5.3 Floor Installation with Base                                  | 10 |
| 5.4 Installation Environment                                      | 11 |
| 5.5 Product size information                                      | 11 |
| <b>6. INSTALLATION</b>                                            | 12 |
| 6.1 Unpacking and Inspection                                      | 12 |
| 6.2 Terminal Connection                                           | 13 |
| 6.3 Description for Communication port                            | 13 |
| 6.4 Mounting the Unit                                             | 14 |
| <b>7. OPERATION</b>                                               | 15 |
| 7.1 Switch On / Off                                               | 15 |
| 7.2 Description for LED                                           | 16 |
| 7.3 ON / OFF or SOC Led (Mode or SOC)                             | 17 |

|                                               |    |
|-----------------------------------------------|----|
| <b>8. LCD DISPLAY ICONS</b>                   | 17 |
| 8.1 BMS Information Page                      | 18 |
| 8.2 Fault Code Table                          | 19 |
| 8.3 DIPswitch SW1-SW4 Description             | 20 |
| <b>9. CONFIGURE NETWORK</b>                   | 21 |
| 9.1 Download APP                              | 21 |
| 9.2 Connect to Built-in WIFI wireless network | 21 |
| 9.3 Configure the network                     | 21 |
| <b>10. CREATE THE PLANT</b>                   | 22 |
| 10.1 Manage device via APP                    | 22 |
| <b>11. EMERGENCY SITUATIONS</b>               | 24 |
| 11.1 Fire                                     | 24 |
| 11.2 Leaking Batteries                        | 24 |
| 11.3 Wet Batteries                            | 24 |
| 11.4 Damaged Batteries                        | 24 |
| 11.5 Warranty                                 | 24 |

# 1 ABOUT THIS MANUAL

## 1.1 Purpose

This manual describes the introduction, installation, operation and emergency situations of the battery bank. Please read this manual carefully before installations and operations. Keep this manual for future reference.

## 1.2 Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

## 1.3 Safety Instructions



**WARNING:** This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

1. Before using the unit, read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. CAUTION --- To reduce risk of injury, damage, even burst. please use it following using manual. In case of causing personal
3. Do not disassemble the battery. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of fire.
4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
5. CAUTION – Only qualified personnel can install this device with inverter.
6. For optimum operation of this battery, please follow required spec to select appropriate cable size.
7. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion or fire.
8. Please strictly follow installation procedure.
9. **GROUNDING INSTRUCTIONS** - This System should be connected to a permanent grounded wiring system. Be sure to comply with local requirements.
10. NEVER cause AC output and DC input short circuited. Do not connect to the mains when DC input short circuits.
11. Warning!! Only qualified service persons are able to service this device.
12. Battery should be installed indoor and kept away from water, high temperature mechanical force and flames.
13. Do not install the battery in any environment of temperature below 0°C or over 55°C, and humidity over 80%.
14. Do not put any heavy objects on the battery.

## 1.4 Can be Connected in Parallel

1. The batteries can be connected in parallel. Series connection is not allowed. Use in upright position only.
2. The batteries are not allowed to connected with PWM controller for charging.

**Special Attention: Due to the built-in protection board of the lithium battery pack is with over-discharge protection function, it is strongly recommended to stop using the load when the battery pack is over-discharged. The battery pack cannot be repeatedly activated for discharge. Or the battery may be failed to be activated by the AC or PV activation cable ( It requires a special charging activation method), so cannot be charged. Therefore, when the battery pack is low power, please charge the battery as soon as possible when main power or solar energy is available.**

## 1.5 Safety rules

To avoid property damage and personal injury, the following rules shall be followed when working on the hazardous live parts of the battery energy storage system:

- It is available for use.
- Ensure that it will not restart.
- Make sure there is no voltage.
- Grounding protection and short circuit protection.
- Cover or shield adjacent live parts.

## 1.6 Safety information

Part damage or short circuit may cause electric shock and death. A short circuit can be caused by connecting battery terminals, resulting in current flow. This type of short circuit shall be avoided under any circumstances. For this reason, follow these instructions:

- Use insulated tools and gloves.
- Do not place any tools or metal parts on the battery module or high-voltage control box.
- When operating the battery, be sure to remove watches, rings, and other metal objects.
- Do not install or operate this system in explosive or high-humidity areas.
- When working on the energy storage system, first turn off the charging controller, then the battery, and ensure that they are not turned on again.

**Improper** use of the battery energy storage system can lead to death. The use of the battery energy storage system beyond its intended use is not allowed, because it may cause great danger.

**Improper** handling of the battery energy storage system can cause life-threatening risks, serious injury or even death.



**Warning!** improper use can cause damage to the battery cell.

- Do not expose the battery module to rain or soak it in liquid.
- Do not expose the battery module to a corrosive environment (such as ammonia and salt).

# 2. TRANSPORTATION

## 2.1 Regulations for the transport of battery modules

It is necessary to comply with the relevant regulations and provisions on roads for shipping lithium-ion products in the corresponding countries.



- Smoking is prohibited in the vehicle during transportation or in the vicinity during loading and unloading



- The dangerous goods transport vehicles shall meet relevant regulations concerning road transportation and shall be equipped with two tested CO2 fire extinguishers.



- Improper vehicle transportation can cause injury. Improper transportation or improper transportation locks may cause the load to slip or overturn, resulting in injury.



- The battery energy storage system can be damaged, if not properly transported. The battery module can only be transported vertically. Note that these parts may be top-heavy. Failure to follow this instruction may result in damage to the part.



• If possible, do not remove the transport packaging before arrival at the installation site. Before removing the transport protector, check if the transport packaging is damaged.



• Improper transport of battery modules may cause injury. The single battery module weighs 36 kg. It could cause injury if it falls or slips. Use only suitable transport and lifting equipment to ensure safe transport.





• Wear safety shoes to avoid the danger of injury. When transporting the battery module, their parts may be crushed due to their heavy weight. Therefore, all persons involved in transportation must wear safety shoes with toe caps. Please observe the safety regulations for transportation at the end customer's site, especially during loading and unloading.



• During transportation and installation of unpacked battery storage cabinets, the risk of injury increases, especially on sharp metal panels. Therefore, all personnel involved in transportation and installation must wear protective gloves.

### 2.2 Permissible and Impermissible Storage Positions of a Packaged

The battery module can only be transported in an upright position.

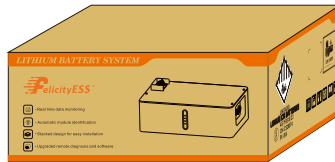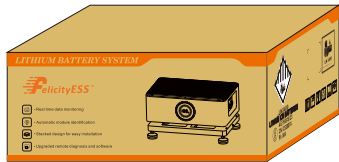

## 3. STORAGE

- Do not expose battery to open flame.
- Do not place the product under direct sunlight.
- Do not place the product near flammable materials. It may lead to fire or explosion in case of accident.
- Store in a cool and dry place with ample ventilation.
- Store the product on a flat surface.
- Store the product out of reach of children and animals.
- Do not damage the unit by dropping, deforming, impacting, cutting or penetrating with a sharp object. It may cause leakage of electrolyte or fire.
- Do not touch any liquid spilled from the product. There is a risk of electric shock or damage to skin.
- Always handle the battery wearing the insulated gloves.
- Do not step on the product or place any foreign objects on it. This can result in damage.
- Do not charge or discharge damaged battery.

## 4. INTRODUCTION

The battery system main using solar power system for family house. It also have a with to controller the battery easily and protect our Household application timely.

### 4.1 Features


Features:

- LiFePO4: Higher safe performance and longer cycle life.
- Multiple Protection: Built-in smart BMS, Breaker and Fuse.
- Modular design for easy installation and increased capacity.
- Flexible Installation: Floor-Mounted.
- Wide Compatibility: Compatible with leading inverter brands.
- High Scalability: Capacity up to 10.24kWh.
- Built-in WIFI: Remote monitor of the battery pack data.

### 4.2 Product Overview



Up to 4 PCS battery packs can be connected in parallel

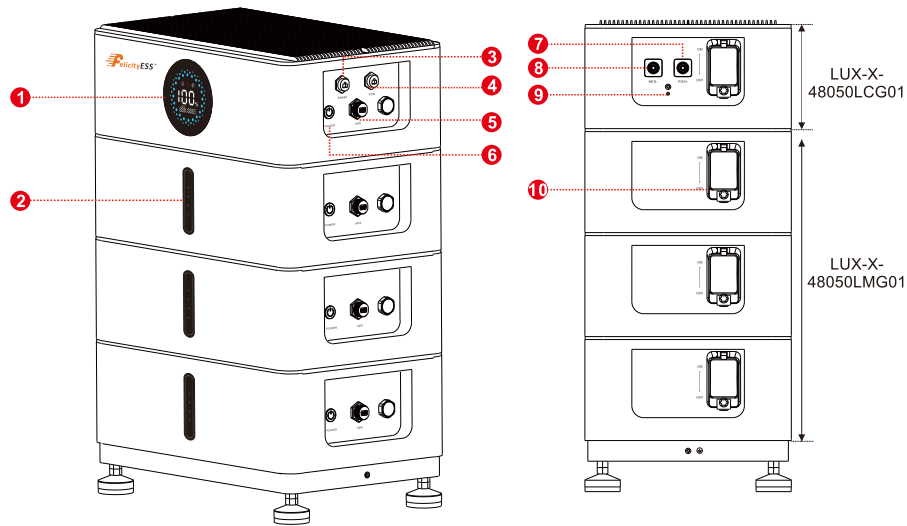

| Number | Name                        |
|--------|-----------------------------|
| 1      | LCD display                 |
| 2      | LED                         |
| 3      | RS485 Communication         |
| 4      | PCS Communication           |
| 5      | ADS                         |
| 6      | Power On/Charging indicator |
| 7      | Battery Positive +          |
| 8      | Battery Negative -          |
| 9      | Earth wire                  |
| 10     | Breaker                     |

### 4.3 Specifications

| Model                                                                           | LUX-X-48050 LCG01                       | LUX-X-48050 LMG01                  | LUX-X-48050 LG01M2 | LUX-X-48050 LG01M3 | LUX-X-48050 LG01M4 |
|---------------------------------------------------------------------------------|-----------------------------------------|------------------------------------|--------------------|--------------------|--------------------|
| Battery Type                                                                    | LiFePO4                                 |                                    |                    |                    |                    |
| Module Nominal Energy                                                           | 2.56kWh                                 |                                    |                    |                    |                    |
| Module Nominal Capacity                                                         | 50Ah                                    |                                    |                    |                    |                    |
| Module Nominal Voltage                                                          | 51.2V                                   |                                    |                    |                    |                    |
| Number of Battery Modules                                                       | 1                                       | 1                                  | 2                  | 3                  | 4                  |
| System Nominal Energy                                                           | 2.56kWh                                 | 2.56kWh                            | 5.12kWh            | 7.68kWh            | 10.24kWh           |
| System Nominal Voltage                                                          | 51.2V                                   |                                    |                    |                    |                    |
| System Operating Voltage                                                        | 44.8-57.6V                              |                                    |                    |                    |                    |
| Recommend Charge/Discharge Current                                              | 25A                                     | 25A                                | 40A                | 40A                | 40A                |
| Max. Continuous Charge/Discharge Current[1]                                     | 50A                                     | 50A                                | 80A                | 80A                | 80A                |
| Peak Charge/Discharge Current(15s)                                              | 100A                                    | 100A                               | 200A               | 300A               | 400A               |
| Scalability                                                                     | Up to 4 units in parallel(10.24kWh)     |                                    |                    |                    |                    |
| Depth of Discharge(DOD)                                                         | ≥95%                                    |                                    |                    |                    |                    |
| Display type                                                                    | Control Module:LCD/Battery Module:LED*4 |                                    |                    |                    |                    |
| IP Rating of Enclosure                                                          | IP65                                    |                                    |                    |                    |                    |
| Working Temperature Range                                                       | Charge: 0°C~+55°C                       |                                    |                    |                    |                    |
|                                                                                 | Discharge: -20°C~+55 °C                 |                                    |                    |                    |                    |
| Storage Temperature Range                                                       | 0°C~+35°C                               |                                    |                    |                    |                    |
| Humidity                                                                        | 5%-95%                                  |                                    |                    |                    |                    |
| Altitude                                                                        | ≤2000m                                  |                                    |                    |                    |                    |
| Communication                                                                   | RS485 / CAN                             |                                    |                    |                    |                    |
| Cycle Life[2]                                                                   | ≥6000 Cycles                            |                                    |                    |                    |                    |
| Installation                                                                    | Floor-Mounted                           |                                    |                    |                    |                    |
| Protection                                                                      | Built-in smart BMS, Breaker, Fuse       |                                    |                    |                    |                    |
| Warranty Period[3]                                                              | 10 Years                                |                                    |                    |                    |                    |
| Control Module<br>LUX-X-48050LCG01                                              | Product Weight Approximate              | 31kg                               |                    |                    |                    |
|                                                                                 | Package Weight Approximate              | 40kg                               |                    |                    |                    |
|                                                                                 | Product Dimension                       | 530×350×180mm                      |                    |                    |                    |
|                                                                                 | Package Dimension                       | 642×462×337mm                      |                    |                    |                    |
| Battery Module<br>LUX-X-48050LMG01                                              | Battery Designation                     | IFpP/41/150/102/[1P16S]M/-10+50/95 |                    |                    |                    |
|                                                                                 | Product Weight Approximate              | 31kg                               |                    |                    |                    |
|                                                                                 | Package Weight Approximate              | 36kg                               |                    |                    |                    |
|                                                                                 | Product Dimension                       | 530×350×175mm                      |                    |                    |                    |
| Package Dimension                                                               | 642×462×293mm                           |                                    |                    |                    |                    |
| [1] Max.continuous charge/Discharge current is affected by temperature and SOC. |                                         |                                    |                    |                    |                    |
| [2] Test conditions: 0.2C Charging/Discharging @25°C, 80% DOD.                  |                                         |                                    |                    |                    |                    |
| [3] Conditions apply, refer to FelicityESS Warranty policy.                     |                                         |                                    |                    |                    |                    |



### 4.4 Recommended Settings



Lithium battery pack is not same as lead-acid battery, so for the devices which you connect with the battery pack for charging or discharging, such as inverters, MPPT charger controllers or UPS, please implement pre-settings as recommended settings as below before you launched them.



|                           |                 |
|---------------------------|-----------------|
| Setting                   | LUX-X-48050LG01 |
| Max. Charging Voltage     | 57.6V           |
| Floating charging Voltage | 57.6V           |
| Max. Charging Current     | 50A*N(Max=80A)  |
| Cut-off voltage           | 48V             |



Notes:"N"means the number of battery packs connected parallel and should not exceed 4.(N≤4)



### 4.5 Labels

|                                                                                                                     |                        |
|---------------------------------------------------------------------------------------------------------------------|------------------------|
| <br>Lithium iron phosphate battery |                        |
| Model                                                                                                               | LUX-X-48050LCG01       |
| Nominal Energy                                                                                                      | 2.56kWh                |
| Nominal Voltage                                                                                                     | 51.2V                  |
| Nominal Capacity                                                                                                    | 50Ah                   |
| Maximum Continuous Charge /Discharge Current                                                                        | 50A                    |
| Communication                                                                                                       | RS485/CAN              |
| Cycle Life                                                                                                          | ≥6,000@25°C, 80% DOD   |
| IP Rating of Enclosure                                                                                              | IP65                   |
| Working Temperature Range                                                                                           | Charge: 0°C~+55°C      |
|                                                                                                                     | Discharge:-20°C~+55 °C |
| IFpP/41/150/102/[1P16S]M/-10+50/95                                                                                  |                        |
|                                    |                        |

|                                                                                                                     |                        |
|---------------------------------------------------------------------------------------------------------------------|------------------------|
| <br>Lithium iron phosphate battery |                        |
| Model                                                                                                               | LUX-X-48050LMG01       |
| Nominal Energy                                                                                                      | 2.56kWh                |
| Nominal Voltage                                                                                                     | 51.2V                  |
| Nominal Capacity                                                                                                    | 50Ah                   |
| Maximum Continuous Charge /Discharge Current                                                                        | 50A                    |
| Communication                                                                                                       | RS485/CAN              |
| Cycle Life                                                                                                          | ≥6,000@25°C, 80% DOD   |
| IP Rating of Enclosure                                                                                              | IP65                   |
| Working Temperature Range                                                                                           | Charge: 0°C~+55°C      |
|                                                                                                                     | Discharge:-20°C~+55 °C |
| IFpP/41/150/102/[1P16S]M/-10+50/95                                                                                  |                        |
|                                    |                        |

|                                                                                                                       |                        |
|-----------------------------------------------------------------------------------------------------------------------|------------------------|
| <br>Lithium iron phosphate battery |                        |
| Model                                                                                                                 | LUX-X-48050LG01M2      |
| Nominal Energy                                                                                                        | 5.12kWh                |
| Nominal Voltage                                                                                                       | 51.2V                  |
| Nominal Capacity                                                                                                      | 100Ah                  |
| Maximum Continuous Charge /Discharge Current                                                                          | 80A                    |
| Communication                                                                                                         | RS485/CAN              |
| Cycle Life                                                                                                            | ≥6,000@25°C, 80% DOD   |
| IP Rating of Enclosure                                                                                                | IP65                   |
| Working Temperature Range                                                                                             | Charge: 0°C~+55°C      |
|                                                                                                                       | Discharge:-20°C~+55 °C |
| IFpP/41/150/102/[(1P16S)2P]M/-10+50/95                                                                                |                        |
|                                    |                        |

|                                                                                                                       |                        |
|-----------------------------------------------------------------------------------------------------------------------|------------------------|
| <br>Lithium iron phosphate battery |                        |
| Model                                                                                                                 | LUX-X-48050LG01M3      |
| Nominal Energy                                                                                                        | 7.68kWh                |
| Nominal Voltage                                                                                                       | 51.2V                  |
| Nominal Capacity                                                                                                      | 150Ah                  |
| Maximum Continuous Charge /Discharge Current                                                                          | 80A                    |
| Communication                                                                                                         | RS485/CAN              |
| Cycle Life                                                                                                            | ≥6,000@25°C, 80% DOD   |
| IP Rating of Enclosure                                                                                                | IP65                   |
| Working Temperature Range                                                                                             | Charge: 0°C~+55°C      |
|                                                                                                                       | Discharge:-20°C~+55 °C |
| IFpP/41/150/102/[(1P16S)3P]M/-10+50/95                                                                                |                        |
|                                    |                        |


|                                                                                                                       |                        |
|-----------------------------------------------------------------------------------------------------------------------|------------------------|
| <br>Lithium iron phosphate battery |                        |
| Model                                                                                                                 | LUX-X-48050LG01M4      |
| Nominal Energy                                                                                                        | 10.24kWh               |
| Nominal Voltage                                                                                                       | 51.2V                  |
| Nominal Capacity                                                                                                      | 200Ah                  |
| Maximum Continuous Charge /Discharge Current                                                                          | 80A                    |
| Communication                                                                                                         | RS485/CAN              |
| Cycle Life                                                                                                            | ≥6,000@25°C, 80% DOD   |
| IP Rating of Enclosure                                                                                                | IP65                   |
| Working Temperature Range                                                                                             | Charge: 0°C~+55°C      |
|                                                                                                                       | Discharge:-20°C~+55 °C |
| IFpP/41/150/102/[(1P16S)4P]M/-10+50/95                                                                                |                        |
|                                    |                        |

## 5. INSTALLATION PROCEDURE


### 5.1 Setup Script

**Step 1:** Open the packaging Carton box and remove the accessories(LUX-X-48050LCG01 battery pack, base ) ;

**Step 2:**Open the packaging Carton box and remove the accessories (LUX-X-48050LMG01 battery pack ) .

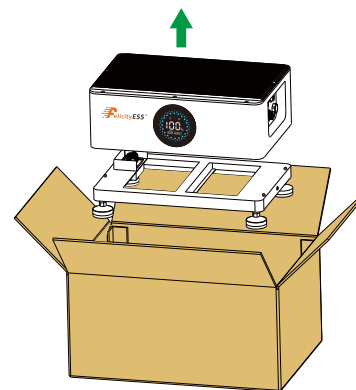


LUX-X-48050LCG01

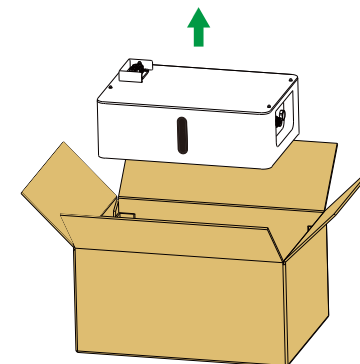


LUX-X-48050LMG01


**Step 3:** Place the base, which should be 35MM away from the wall.

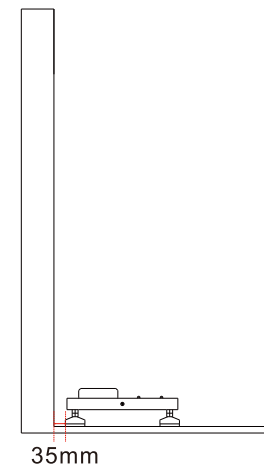


**Step 4:** Stack and place the products, with a base on the bottom layer, LED lights on the middle layer, and an LCD display screen on the top layer.

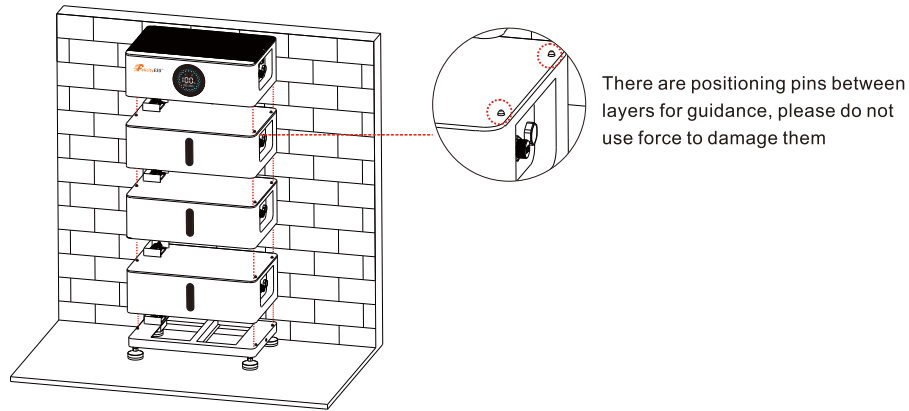

**Step 5:** Use screws to lock the sheet metal connectors between the stacked products.

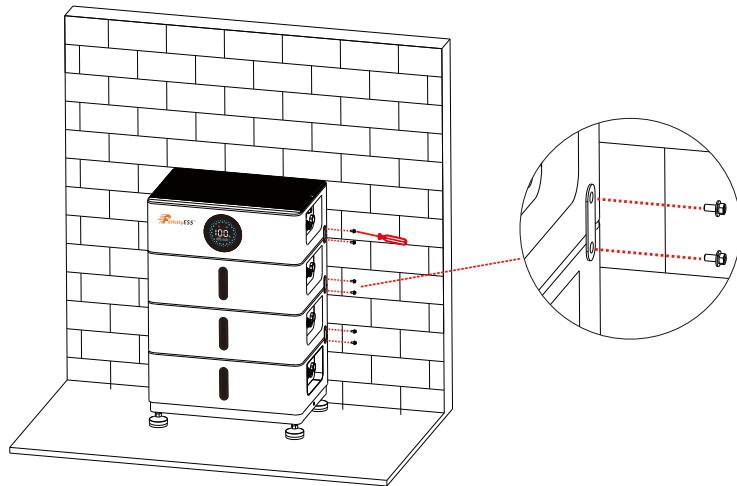


**5.2 Tools**

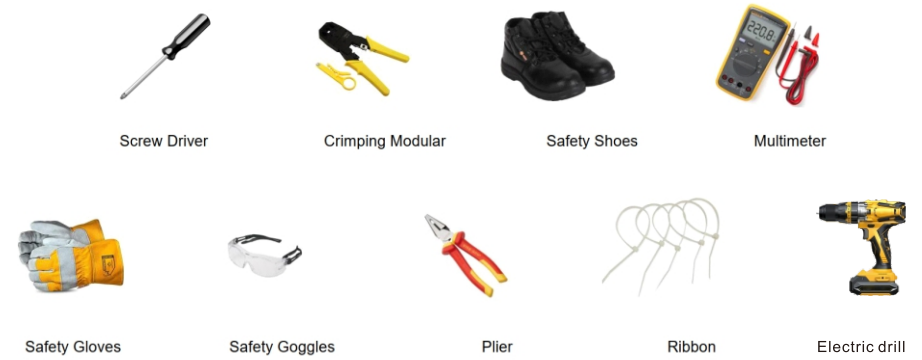


**5.3 Floor Installation with Base**


**Installation Location Requirements**

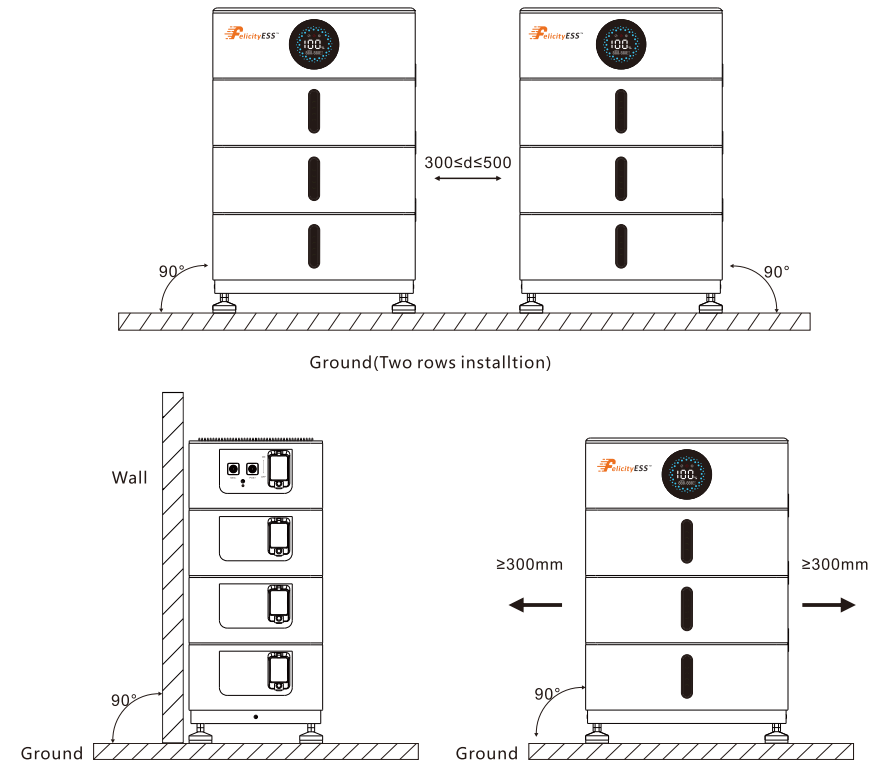

### 5.4 Installation Environment

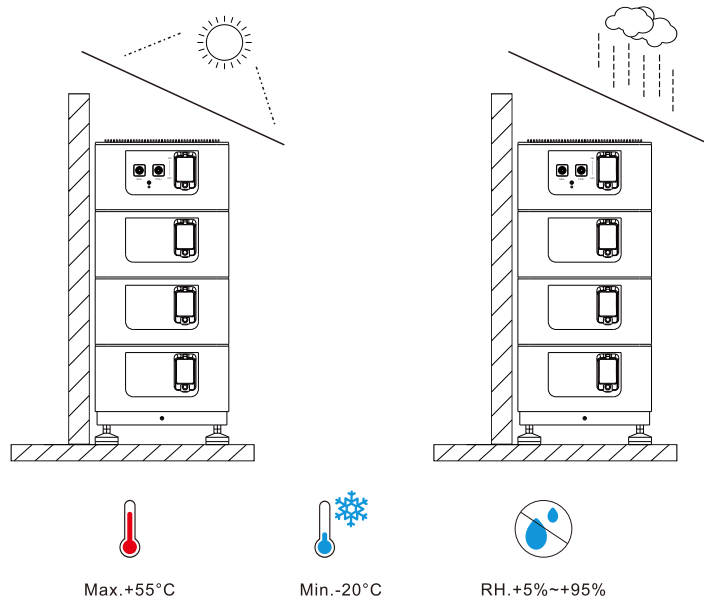

### 5.5 Product size information

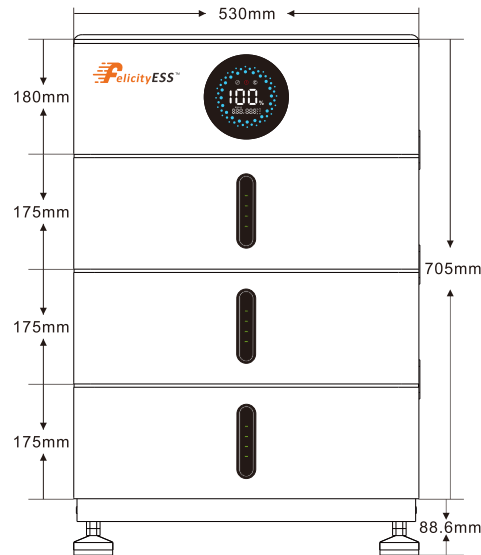

## 6. INSTALLATION

### 6.1 Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package.


| LUX-X-48050LCG01 |                                                                                                                                   |          |         |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------|----------|---------|
| NO.              | DESCRIPTION                                                                                                                       | QUANTITY | PICTURE |
| 1                | User manual                                                                                                                       | 1        |         |
| 2                | Warranty card                                                                                                                     | 1        |         |
| 3                | Communication Cable 1: used for CAN/RS485 communication with inverters from other brands.                                         | 1        |         |
| 4                | Communication Cable 2: used for RS485 communication with Felicity inverters.                                                      | 1        |         |
| 5                | Communication Cable 3: used for parallel communication with battery packs.                                                        | 1        |         |
| 6                | Power Cable: 0.9 meters, 25mm <sup>2</sup> , allows for charging and discharging up to 125A, used for connecting to external PCS. | 2        |         |
| 7                | Signal Terminal: used for creating custom communication cables.                                                                   | 2        |         |
| 8                | Fix the bracket                                                                                                                   | 1        |         |

| LUX-X-48050LMG01 |                     |          |         |
|------------------|---------------------|----------|---------|
| NO.              | DESCRIPTION         | QUANTITY | PICTURE |
| 1                | 2.56kWh Battery box | 1        |         |
| 2                | User manual         | 1        |         |
| 3                | Warranty card       | 1        |         |
| 4                | Fix the bracket     | 1        |         |




### 6.2 Terminal Connection

#### Power terminal

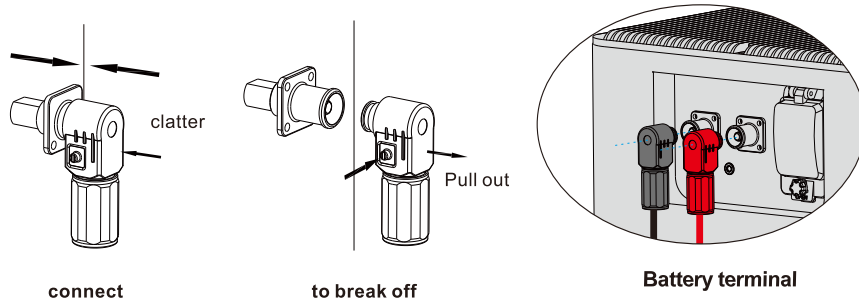

**Note:** Press the position indicated in the figure above before disconnecting the power terminal.

### 6.3 Description for Communication port

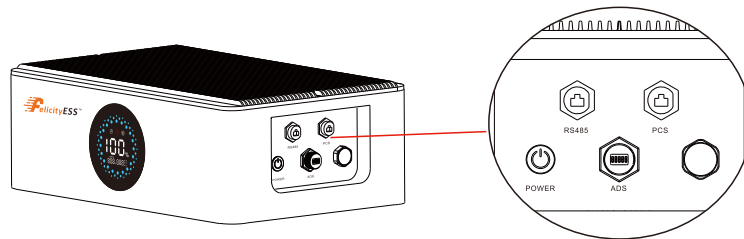

PCS Port Pin Definition

| Pin | Function Definitions | Function Declaration                                                           |
|-----|----------------------|--------------------------------------------------------------------------------|
| 1   | COM-GND              | COM-GND                                                                        |
| 2   | /                    | /                                                                              |
| 3   | /                    | /                                                                              |
| 4   | /                    | /                                                                              |
| 5   | RS485-B              | Communication between the battery pack and the inverter through the RS485 port |
| 6   | RS485-A              |                                                                                |
| 7   | CAN-L                | Communication between the battery pack and the inverter through the CAN port   |
| 8   | CAN-H                |                                                                                |

RS485 Port Pin Definition

| Pin | Function Definitions | Function Declaration                                                           |
|-----|----------------------|--------------------------------------------------------------------------------|
| 1   | COM-GND              | COM-GND                                                                        |
| 2   | /                    | /                                                                              |
| 3   | /                    | /                                                                              |
| 4   | /                    | /                                                                              |
| 5   | RS485-B              | Communication between the battery pack and the inverter through the RS485 port |
| 6   | RS485-A              |                                                                                |
| 7   | /                    | /                                                                              |
| 8   | /                    | /                                                                              |

### 6.4 Mounting the Unit


Consider the following points before selecting where to install:

- Do not mount the battery on flammable construction materials.
- The ambient temperature should be between 0°C and 45°C to ensure optimal operation.
- The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the right diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

Please follow below steps to implement battery connection:

1. Assemble battery ring terminal based on recommended battery cable and terminal size.
2. Connect all battery packs as units requires. It's suggested to connect at least 2 sets for inverter larger than the energy of a battery pack in parallel connection.

For pure off-grid systems, the power line needs to be connected to the battery's MPPT charging controller and the battery pack is only charged by the solar panel, the connection diagram is as follows:

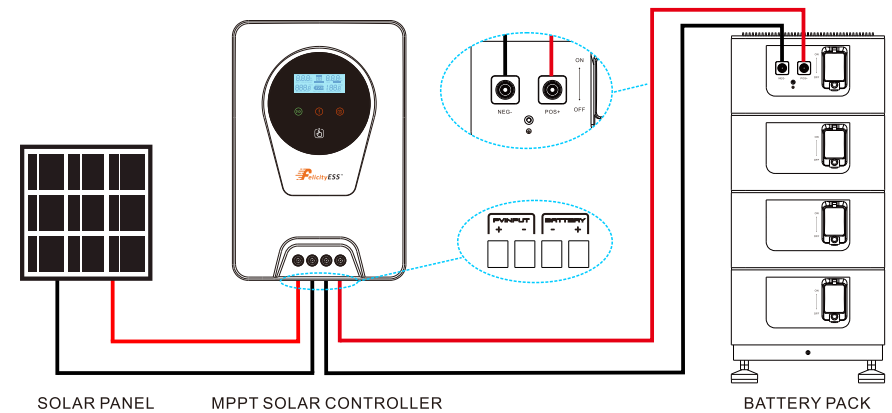

## 7. OPERATION

Once the batteries are connected well, close the breaker to the ON block, press On/Off button to enable the output of the battery pack.



### 7.1 Switch On / Off

- 1.Switch on: press On/Off button to switch on the battery, then the battery will do self-inspection before enable output. The LCD will show the SOC.
- 2.Switch off: press and hold On/Off button for 1to3 seconds, the battery will shut down directly.

| DIP SWITCH |     |                       |
|------------|-----|-----------------------|
|            | 1-4 | Communication Address |
|            | 5   | Termination Resister  |

Adjust each battery pack dialer from left to right according to the diagram below (from top to bottom)

| No   | 1 | 2 | 3 | 4 |
|------|---|---|---|---|
| 1PCS |   |   |   |   |
| 2PCS |   |   |   |   |
| 3PCS |   |   |   |   |
| 4PCS |   |   |   |   |

**Note:**After completing the above steps, arbitrarily select the positive and negative poles of one of the battery packs to output. After confirming the correct connection of the inverter, controller and battery, you can turn on any of the switches and use the battery group happily.

### 7.2 Description for LED

The LED shows the SOC of module N.

|      |     |     |     |                    |
|------|-----|-----|-----|--------------------|
|      |     |     |     |                    |
| 100% | 75% | 50% | 25% | Flashing SOC < 10% |







Note: The battery need to be fully charged for at least once in one month to ensure the accurate SOC calculation.

### 7.3 ON / OFF or SOC Led (Mode or SOC)

| BATTERY MODE | ON/OFF    |         | SOC          |                         |      |      | REMARK                        |
|--------------|-----------|---------|--------------|-------------------------|------|------|-------------------------------|
|              | GREEN LED | RED LED | LED1         | LED2                    | LED3 | LED4 |                               |
| POWER OFF    | OFF       | OFF     | OFF          | OFF                     | OFF  | OFF  |                               |
| POWER ON     | OFF       | ON      | ON           | ON                      | ON   | ON   |                               |
| STANDBY      | OFF       | OFF     | SOC          |                         |      |      | SOC <10%(DEFAULT): LED1 FLASH |
| NORMAL       | ON        | OFF     | RUNNING /SOC |                         |      |      | SOC <10%(DEFAULT): LED1 FLASH |
| DISCHARGE    | ON        | OFF     | SOC          |                         |      |      | SOC <10%(DEFAULT): LED1 FLASH |
| CHARGE       | FLASH     | OFF     | RUNNING      |                         |      |      |                               |
| LOW POWER    | FLASH     | OFF     | OFF          |                         |      |      |                               |
| FAULT        | OFF       | ON      | ON           | OFF                     | OFF  | OFF  | BATTERY VOLTAGE HIGH          |
|              |           |         | OFF          | ON                      | OFF  | OFF  | BATTERY VOLTAGE LOW           |
|              |           |         | ON           | ON                      | OFF  | OFF  | CELL VOLTAGE HIGH             |
|              |           |         | OFF          | OFF                     | ON   | OFF  | CELL VOLTAGE LOW              |
|              |           |         | ON           | OFF                     | ON   | OFF  | CHARGING CURRENT HIGH         |
|              |           |         | OFF          | ON                      | ON   | OFF  | DISCHARGING CURRENT HIGH      |
|              |           |         | ON           | ON                      | ON   | OFF  | BMS TEMPERATURE HIGH          |
|              |           |         | OFF          | OFF                     | OFF  | ON   | BMS TEMPERATURE LOW           |
|              |           |         | ON           | OFF                     | OFF  | ON   | CELL TEMPERATURE HIGH         |
|              |           |         | OFF          | ON                      | OFF  | ON   | CELL TEMPERATURE LOW          |
| ON           | ON        | OFF     | ON           | CURRENT SENSOR ABNORMAL |      |      |                               |






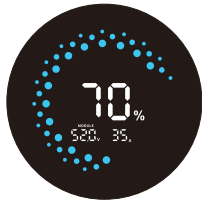

## 8. LCD DISPLAY ICONS



| Icon                                                                                | Function Description                                                                                                                         |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Display Information                                                                 |                                                                                                                                              |
|   | Indicates the voltage, current, temperature, SOC of the module. (Short press the button to display the information of each parallel module.) |
|  | Indicates SOC                                                                                                                                |
|  | Indicates battery level, each LED represents 5%. (When charging, this icon flashes; when discharging, the icon displays constant)            |
|  | Indicates settings.                                                                                                                          |
|  | Indicates a fault.                                                                                                                           |
|  | Indicates communication signs.                                                                                                               |

### 8.1 BMS Information Page

The basic information will be displayed in turn after power on.
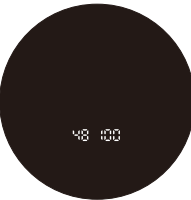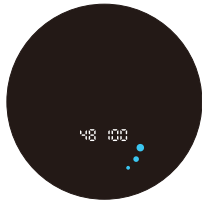
|                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                             |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>BMS power on information</b><br/>BMS information is all on.</p>                                                                                                                                                                                                                                                                 | <p><b>BMS version</b><br/>Eg: "516" is the software version, "500" is the IAP version and temporary version.</p>                                                                                         |
| <p><b>BMS type</b><br/>Eg: Rated voltage is "48V", model is "100AH".</p>                                                                                                                                                                                                                                                              | <p><b>BMS data</b><br/>This interface indicates that it is in SOC calibration.</p>                                                                                                                       |
| <p><b>BMS data</b><br/>Eg: "70%" refer to battery SOC, "C" indicates that the battery is charging, and if it is discharging, "d" is displayed. "2" indicates that the data currently displayed is for module 2, "65%" represents the SOC of module 2. Short press the button to display the information of each parallel module</p>  | <p><b>BMS data</b><br/>Eg: "70%" refer to battery SOC, "52.0V" refer to battery voltage, "35A" refer to battery current. Short press the button to display the information of each parallel module</p>  |
| <p><b>BMS fault code / flag</b><br/>Eg: "52.0V" / "C09" / "70%" are battery voltage, fault code and SOC respectively, and Fault icon constant</p>                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                             |

8.2 Fault Code Table

| Fault Code | Fault information         | Trouble Shooting                                                                                                                                                                                                                                                                                                             |
|------------|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| C01        | Battery overvoltage       | Restart the unit, if the error happens again, please return to repair center.                                                                                                                                                                                                                                                |
| C02        | Battery undervoltage      | Restart the unit, if the error happens again, please return to repair center.                                                                                                                                                                                                                                                |
| C03        | Cell overvoltage          | Restart the unit, if the error happens again, please return to repair center.                                                                                                                                                                                                                                                |
| C04        | Cell undervoltage         | Restart the unit, if the error happens again, please return to repair center.                                                                                                                                                                                                                                                |
| C05        | Charge overcurrent        | Restart the unit, if the error happens again, please return to repair center.                                                                                                                                                                                                                                                |
| C06        | Discharge overcurrent     | Restart the unit, if the error happens again, please return to repair center.                                                                                                                                                                                                                                                |
| C07        | MOS overtemperature       | 1. The inner temperature is over the limitation.<br>2. Check whether the ambient temperature is too high.                                                                                                                                                                                                                    |
| C07        | MOS overtemperature       | 1. The inner temperature is over the limitation.<br>2. Check whether the ambient temperature is too high.                                                                                                                                                                                                                    |
| C08        | MOS undertemperature      | 1. The internal temperature is lower than the limit range.<br>2. Check whether the ambient temperature is too low.                                                                                                                                                                                                           |
| C09        | Cell overtemperature      | Restart the unit, if the error happens again, please return to repair center.                                                                                                                                                                                                                                                |
| C10        | Cell undertemperature     | Restart the unit, if the error happens again, please return to repair center.                                                                                                                                                                                                                                                |
| C11        | Abnormal current sampling | Restart the unit, if the error happens again, please return to repair center.                                                                                                                                                                                                                                                |
| C12        | Abnormal output impedance | Restart the unit, if the error happens again, please return to repair center.                                                                                                                                                                                                                                                |
| C13        | Parallel failed           | 1. Please check if single unit is installed to parallel system.<br>2. If this error happens during parallel installation, please check wires connection. If they are connected correctly, please finish parallel installation first, and then Restart the unit.<br>3. If the problem remains, please contact your installer. |
| C14        | Output loss               | 1. Please check whether the circuit breaker is closed;<br>2. Please check whether the fuse is normal;<br>3. Restart the unit, if the error happens again, please return to repair center.                                                                                                                                    |

8.3 DIP switch SW1-SW4 Description

| DIP switch SW1-SW4 Description ①                                                                                                                                                                   |     |     |     |                                                  |     | DIP switch SW5 Description ②   |  |  |  |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|-----|-----|--------------------------------------------------|-----|--------------------------------|--|--|--|
| SW1                                                                                                                                                                                                | SW2 | SW3 | SW4 | Remarks                                          | SW5 | Remarks                        |  |  |  |
| 0                                                                                                                                                                                                  | 0   | 0   | 0   | means ID=0, communication address is 0x00/0x10 ③ | 1   | means connect 120Ω resistor    |  |  |  |
| 1                                                                                                                                                                                                  | 0   | 0   | 0   | means ID=1, communication address is 0x01 ④      |     |                                |  |  |  |
| 0                                                                                                                                                                                                  | 1   | 0   | 0   | means ID=2, communication address is 0x02        | 0   | means disconnect 120Ω resistor |  |  |  |
| 1                                                                                                                                                                                                  | 1   | 0   | 0   | means ID=3, communication address is 0x03        |     |                                |  |  |  |
| 0                                                                                                                                                                                                  | 0   | 1   | 0   | means ID=4, communication address is 0x04        |     |                                |  |  |  |
| 1                                                                                                                                                                                                  | 0   | 1   | 0   | means ID=5, communication address is 0x05        |     |                                |  |  |  |
| 0                                                                                                                                                                                                  | 1   | 1   | 0   | means ID=6, communication address is 0x06        |     |                                |  |  |  |
| 1                                                                                                                                                                                                  | 1   | 1   | 0   | means ID=7, communication address is 0x07        |     |                                |  |  |  |
| 0                                                                                                                                                                                                  | 0   | 0   | 1   | means ID=8, communication address is 0x08        |     |                                |  |  |  |
| 1                                                                                                                                                                                                  | 0   | 0   | 1   | means ID=9, communication address is 0x09        |     |                                |  |  |  |
| 0                                                                                                                                                                                                  | 1   | 0   | 1   | means ID=10, communication address is 0x0A       |     |                                |  |  |  |
| 1                                                                                                                                                                                                  | 1   | 0   | 1   | means ID=11, communication address is 0x0B       |     |                                |  |  |  |
| 0                                                                                                                                                                                                  | 0   | 1   | 1   | means ID=12, communication address is 0x0C       |     |                                |  |  |  |
| 1                                                                                                                                                                                                  | 0   | 1   | 1   | means ID=13, communication address is 0x0D       |     |                                |  |  |  |
| 0                                                                                                                                                                                                  | 1   | 1   | 1   | means ID=14, communication address is 0x0E       |     |                                |  |  |  |
| 1                                                                                                                                                                                                  | 1   | 1   | 1   | means ID=15, communication address is 0x0F       |     |                                |  |  |  |
| Remark ①: 1 in SW1-SW5 indicates ON status, and 0 indicates OFF status.                                                                                                                            |     |     |     |                                                  |     |                                |  |  |  |
| Remark ②: When multiple battery packs communicate, the last battery pack SW5 needs to be in the ON status, otherwise the communication may have interference.                                      |     |     |     |                                                  |     |                                |  |  |  |
| Remark ③: When the battery pack ID is set to 0, it means stand-alone operation, and it is not necessary to detect whether the parallel condition is satisfied ⑤                                    |     |     |     |                                                  |     |                                |  |  |  |
| Remark ④: When the battery pack ID is set to 1-15, it means that the parallel operation is required, and it is necessary to detect whether the parallel condition is satisfied ⑤                   |     |     |     |                                                  |     |                                |  |  |  |
| Remark ⑤: The parallel condition is that the difference between the battery voltage of the local battery and all the battery pack voltages is <3V, otherwise wait until the condition is satisfied |     |     |     |                                                  |     |                                |  |  |  |

## 9. Configure Network

### 9.1 Download APP

Scan the QR Code on the right side and download the APP.




Fsolar APP

### 9.2 Connect to Built-in WIFI wireless network

Configure the mobile phone WLAN to connect to the wireless network of the Built-in WIFI

- 1) Run the APP, enter the login page, click the [Setup network] button to enter the network configuration page.
- 2) On the network configuration page, click the [Switch] button to enter the mobile phone WLAN page.

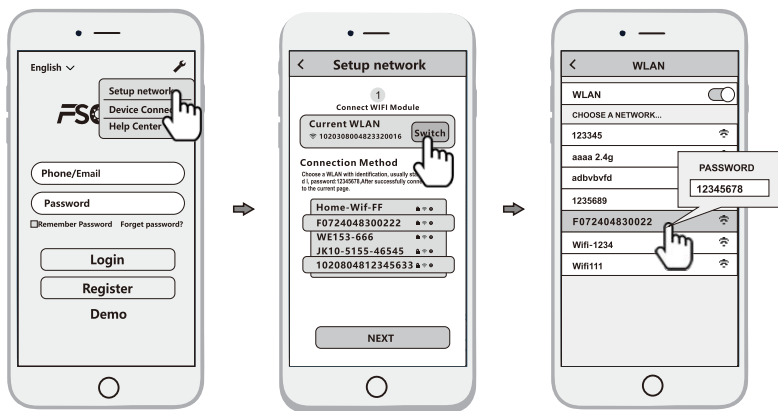

Configure the mobile phone WLAN to connect to the wireless network of the Built-in WIFI.


- 1) Run the APP, enter the login page, click the [Setup network] button to enter the network configuration page.
- 2) On the network configuration page, click the [Switch] button to enter the mobile phone WLAN page.
- 3) On the WLAN page of the mobile phone, find the corresponding wireless network name (SSID) of the Smart WiFi module, starting with F (e.g. Fxxxxxxxxxxxxxxxx, the xxxxxxxxxxxxxxxxxxx is the same as the device serial number). enter the module wireless network password (default password: 12345678), and connect to the wireless network of the Built-in WIFI.

### 9.3 Configure the network

- 1) After the mobile WLAN is connected to the wireless network of the Built-in WIFI, return to the network configuration page of the APP and click the [NEXT] button to enter the WiFi network page.
- 2) On the WiFi network page, select the router wireless network to which the Built-in WIFI needs to connect, or directly enter the route name, enter the router wireless network password and click the [NEXT] button.

3) And then wait for the Built-in WIFI to connect to the router's wireless network, which will take some time.

Then you can use the diagnostic function of the APP or according to the fault appendix to troubleshoot the problem.

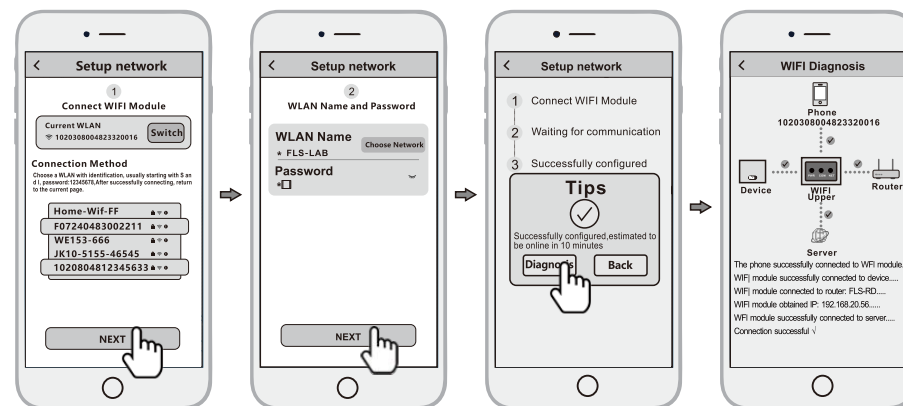


## 10. Create the plant

After the Built-in WIFI is connected to the server, it will transmit the data of the device to the server. And after the plant is created, users can view and manage the device via the APP or web browser.

### 10.1 Manage device via APP


#### 10.1.1 Register an account

Run the app, enter the login page, click the [Registration] button, select the role you want to register, enter and fill in the relevant information (optional email/phone number) to register.

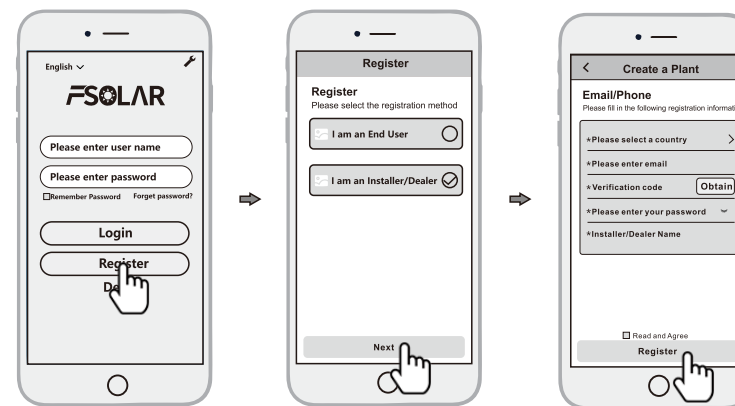


10.1.2 New power station construction

1) Log in with the newly registered account, enter the homepage, and click on [ Create A Plant ]

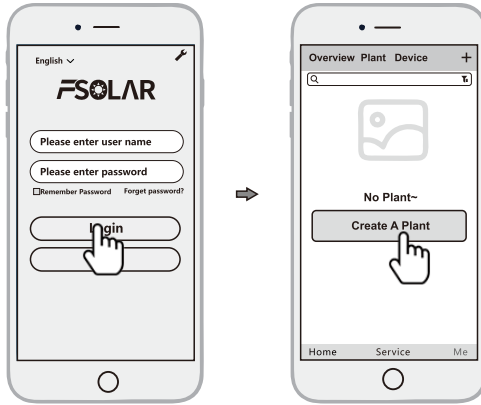

2) Fill in the corresponding information and click [OK]

3) Click [Add device], click the above icon [scan], align the bar code/two-dimensional code on the side of the inverter or battery pack to scan, or fill in the SN and activation code on the label.

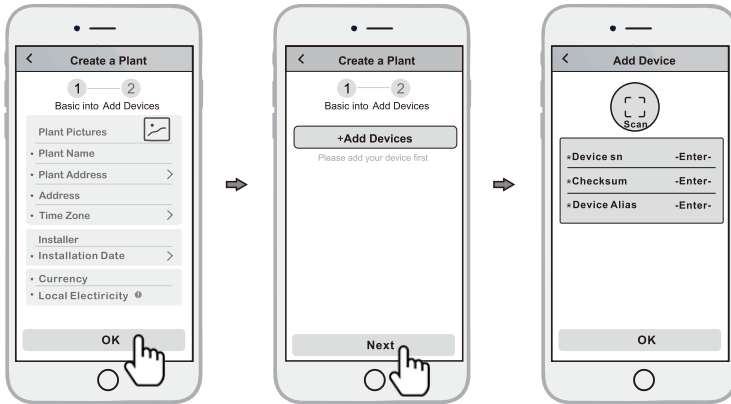

4) Manage the device via a web browser, please refer to: <https://shine.felicityess.com>

## 11. EMERGENCY SITUATIONS

FelicityESS cannot guarantee battery absolute safety.

### 11.1 Fire

In case of fires, make sure that the following equipment is available near the system.

- SCBA (self-contained breathing apparatus) and protective gear in compliance with the Directive on Personal Protective Equipment 89/686/EEC.
- NOVEC 1230, FM-200, or dioxide extinguisher

Batteries may explode when heated above 150°C. KEEP FAR AWAY from the battery if it catches fire.

### 11.2 Leaking Batteries

If the battery pack leaks electrolyte, avoid contact with the leaking liquid or gas. If one is exposed the leaked substance, immediately perform the actions described below.

- Inhalation: Evacuate the contaminated area, and seek medical attention.
- Contact with eyes: Rinse eyes with running water for 5 minutes, and seek medical attention.
- Contact with skin: Wash the affected area thoroughly with soap and water, and seek medical attention.
- Ingestion: Induce vomiting, and seek medical attention.

### 11.3 Wet Batteries

If the battery pack is wet or submerged in water, do not let people access it, and contact your supplier for help.

### 11.4 Damaged Batteries

Damaged batteries are not fit for use and are dangerous and must be handled with the utmost care. It may leak electrolyte or produce flammable gas. If the battery pack seems to be damaged, pack it in its original container, and then return it to your supplier.

### 11.5 Warranty

Products that are operated strictly in accordance with the user manual are covered by the warranty. Any violation of this manual may void the warranty.

#### Limitation of Liability

Any product damage or property loss caused by the following conditions, FelicityESS does not assume any direct or indirect liability.

- Product modified, design changed or parts replaced.
- Changed, or attempted repairs and erasing of series number or seals;
- System design and installation are not in compliance with standards and regulations;
- The product has been improperly stored in end user's premises;
- Transport damage (including painting scratch caused by movement inside packaging during shipping). A claim should be made directly to shipping or insurance company.